


deco-tronic



<b>Dekupiersäge</b>	<b>D</b>
<b>Scroll Saw</b>	<b>GB</b>
<b>Scie à découper</b>	<b>FR</b>
<b>Segatrice a svolgere</b>	<b>I</b>
<b>Decoupeerzaag</b>	<b>NL</b>
<b>Sierra de marqueteria</b>	<b>E</b>
<b>Serra de arcos para recortes</b>	<b>PO</b>
<b>Decupersåg</b>	<b>S</b>
<b>Käyttöhjeet</b>	<b>SF</b>
<b>Dekupersag</b>	<b>N</b>
<b>Dekupørsav</b>	<b>DK</b>

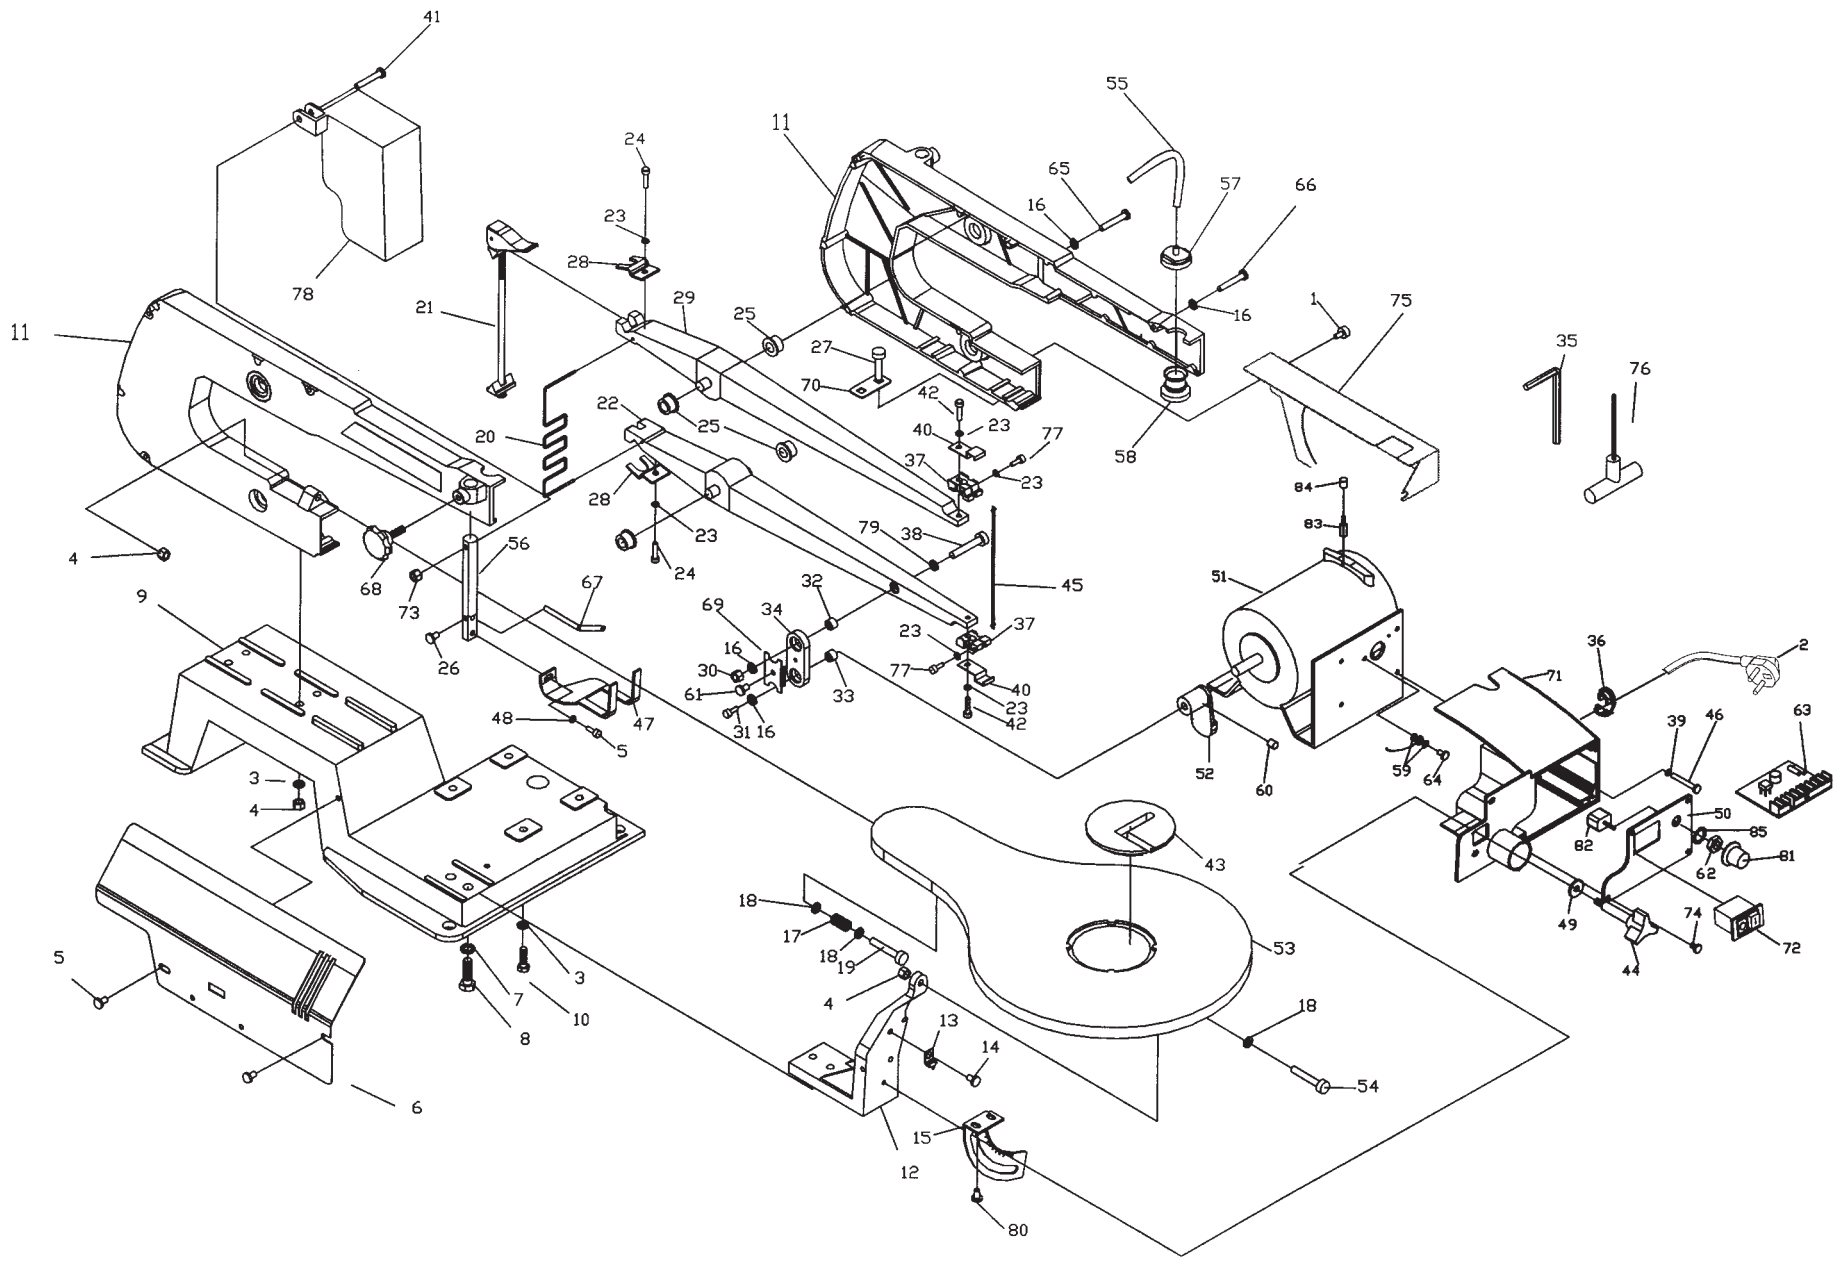

	deco-tronic		deco-tronic
lfd. Nr.	Art. Nr.	lfd. Nr.	Art. Nr.
1		46	
2	8800 1601	47	8800 1625
3		48	
4		49	
5		50	8800 1626
6	8800 1602	51	8800 1657
7		52	8800 1628
8		53	8800 1629
9	8800 1645	54	
10		55	8800 1630
11	8800 1604	56	8800 1631
12	8800 1605	57	8800 1632
13	8800 1606	58	8800 1633
14		59	
15	8800 1607	60	
16		61	
17	8800 1608	62	
18		63	8800 1658
19		64	
20	8800 1609	65	
21	8800 1610	66	
22	8800 1611	67	8800 1636
23		68	8800 1637
24		69	8800 1638
25	8800 1612	70	8800 1639
26		71	8800 1640
27		72	8800 1641
28	8800 1613	73	
29	8800 1614	74	
30		75	8800 1642
31		76	8800 1643
32	8800 1615	77	
33	8800 1616	78	8800 1644
34	8800 1617	79	
35	8800 1618	80	
36	8800 1619	81	8800 1659
37	8800 1620	82	8800 1660
38		83	8800 1661
39		84	8800 1662
40	8800 1621	85	
41			
42			
43	8800 1622		
44	8800 1623		
45	8800 1624		