

HITACHI

LIST NO. 0773

ELECTRIC TOOL PARTS LIST

■ **SABER SAW**
Model CR 17Y

1997 • 5 • 30
(E2)



