


E3-03085B-01

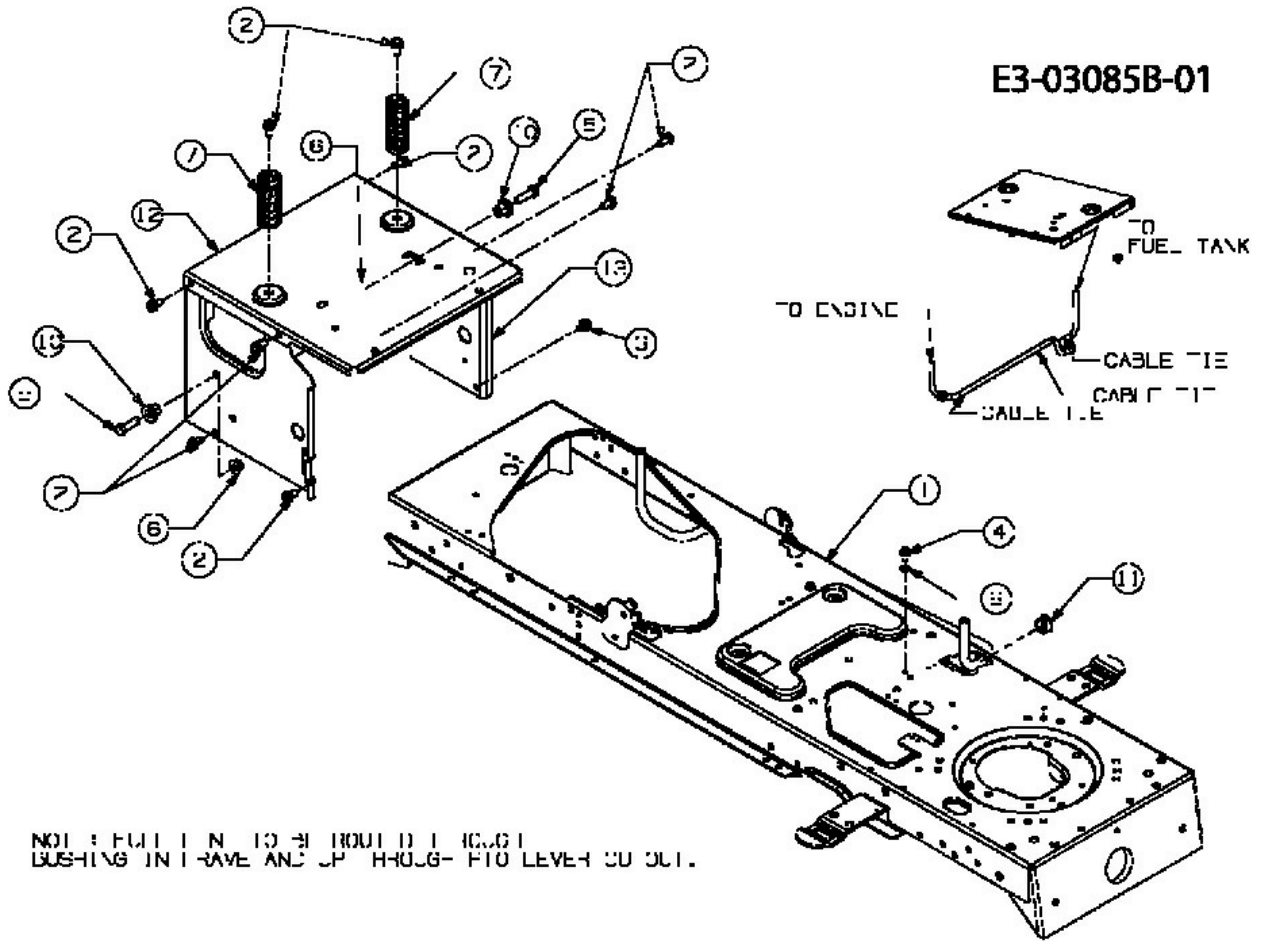

NOTE: FUEL TANK IS NOT TO BE REMOVED FROM THE
 BUSHING IN THE BASE AND UP THROUGH THE LEVEL OF THE