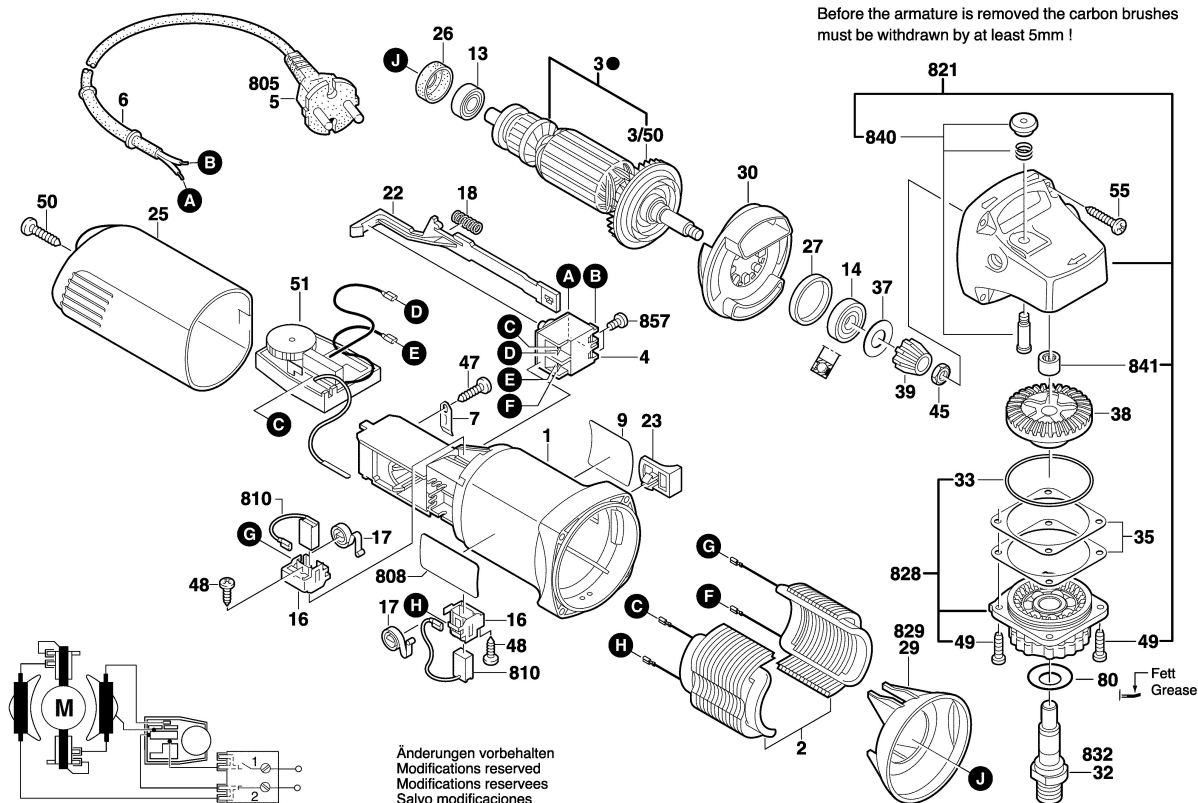


Gerad - Verzahnung

Fig. /Abb. 1

● Vor Demontage des Ankers
Kohlebürsten 5mm zurückziehen !
Before the armature is removed the carbon brushes
must be withdrawn by at least 5mm !

**Fig. /Abb. 2**