


0 601 377 6E3
Stand 13-11
Issue 14-07-22

Fig./Abb. 1

Gerad - Verzahnung

● Vor Demontage des Ankers
Kohlebürsten 5mm zurückziehen !
Before the armature is removed the carbon brushes
must be withdrawn by at least 5mm !

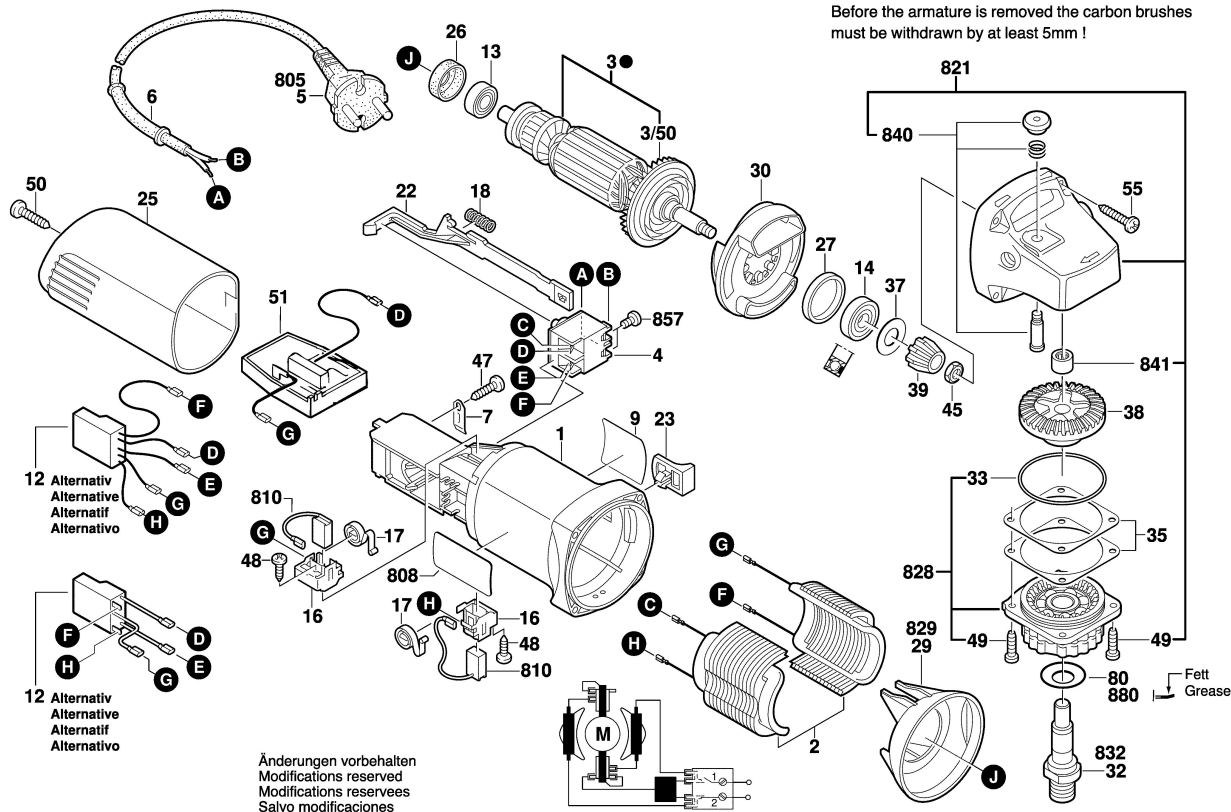

0 601 377 6E3
Stand 09-01-21
Issue 09-01-27

Fig./Abb. 2

