


3 601 C75 0B7
Stand 13-01-17
Issue 13-01-30

Fig./Abb. 1

Gerad - Verzahnung


● Vor Demontage des Ankers
Kohlebürsten 5mm zurückziehen !
Before the armature is removed the carbon brushes
must be withdrawn by at least 5mm !

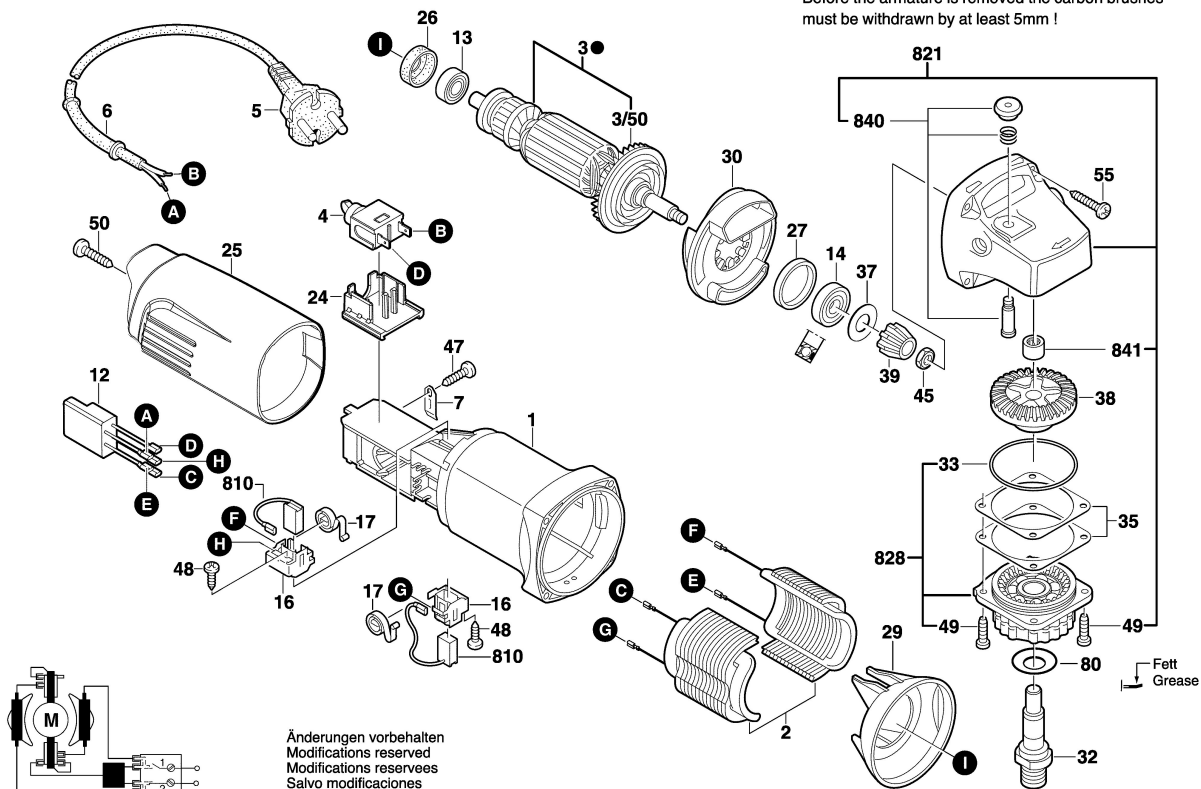

Änderungen vorbehalten
Modifications reserved
Modifications reserves
Salvo modificaciones

3 601 C75 0B7
Stand 13-01-17
Issue 13-01-30

Fig./Abb. 2

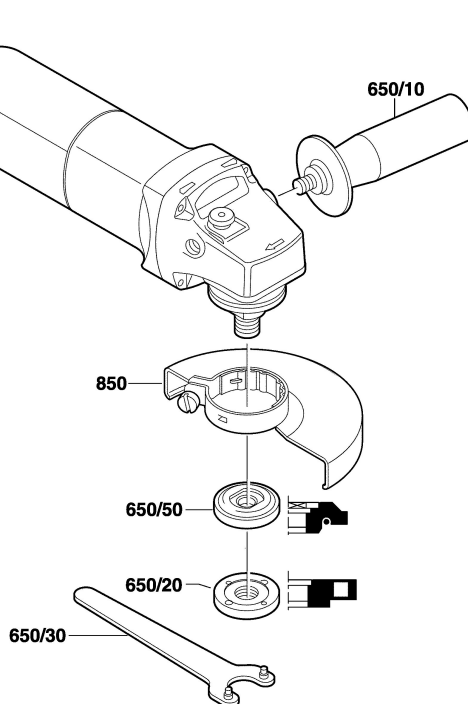

Änderungen vorbehalten
Modifications reserved
Modifications reserves
Salvo modificaciones