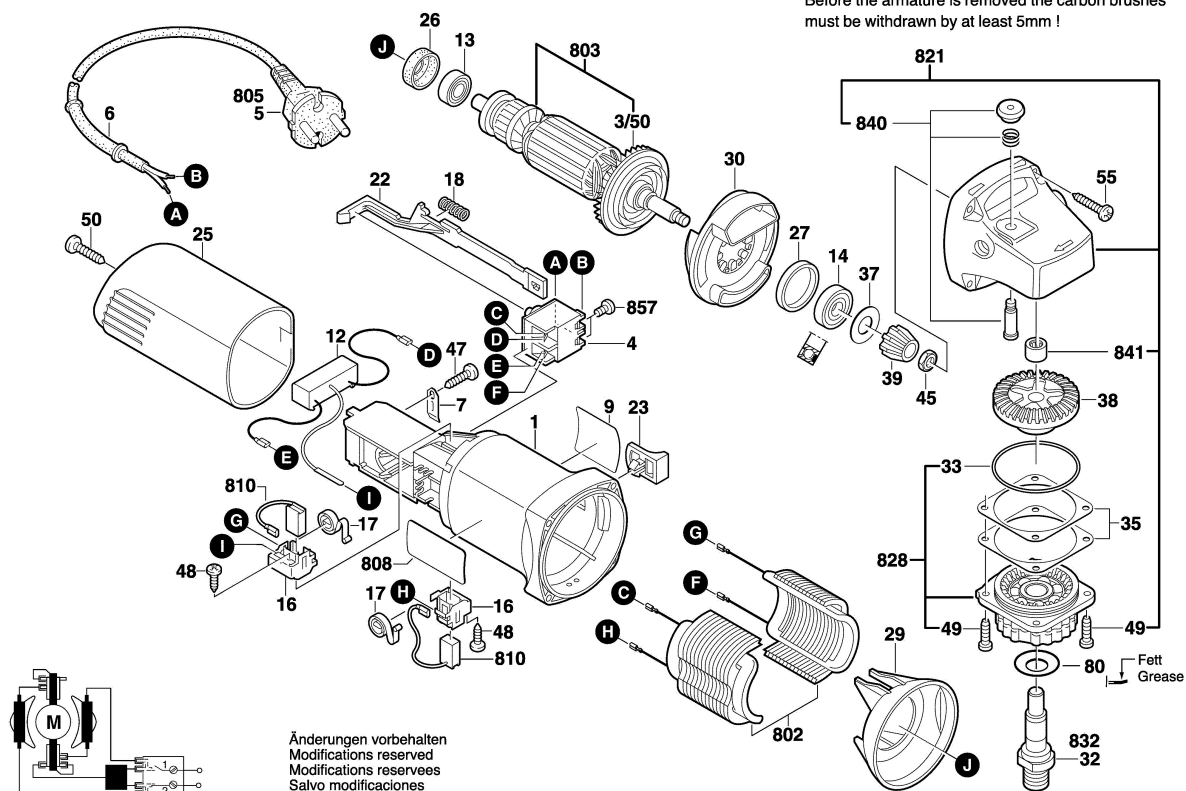


Fig. /Abb. 1

Gerad - Verzahnung

- Vor Demontage des Ankers
Kohlebürsten 5mm zurückziehen !
Before the armature is removed the carbon brushes
must be withdrawn by at least 5mm !

**Fig. /Abb. 2**