

Fig. /Abb. 1

## Gerad - Verzahnung

- Vor Demontage des Ankers  
Kohlebürsten 5mm zurückziehen !  
Before the armature is removed the carbon brushes  
must be withdrawn by at least 5mm !

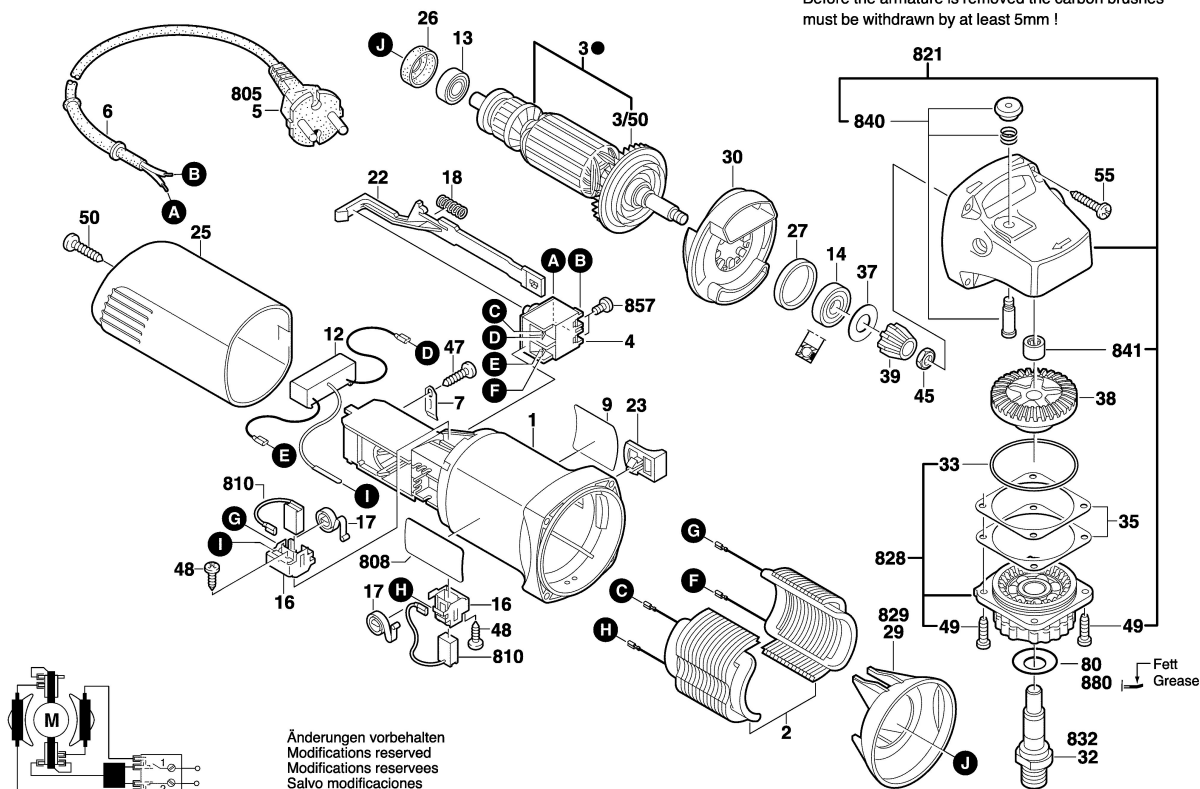


Fig. /Abb. 2

