

Fig./Abb. 1

Pos. 899 = Bohrerhammer vollständig
= Rotary Hammer complete

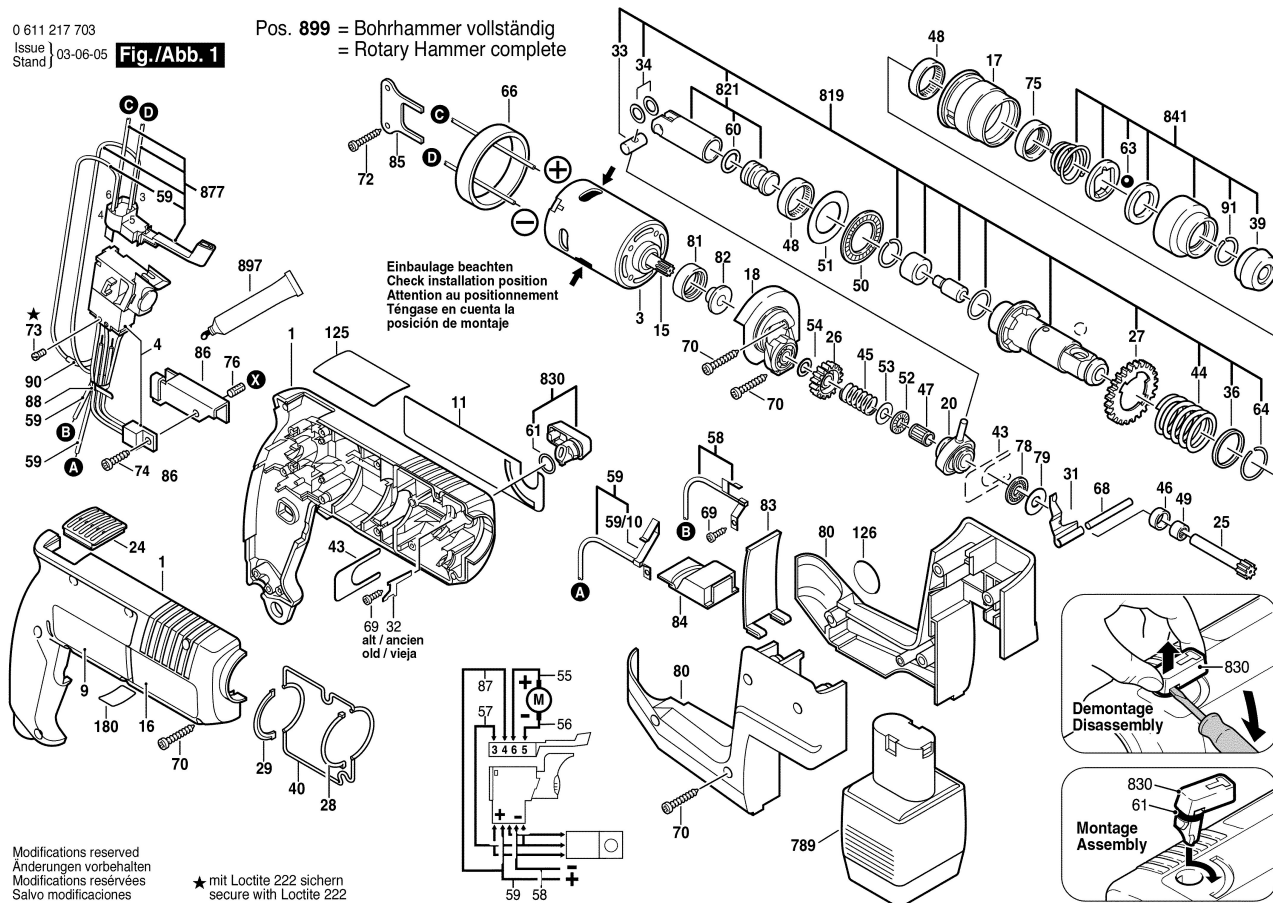


Fig./Abb. 2

