


3 603 D11 040  
Stand 05-08  
Issue 08-01-28

Fig. /Abb. 1

## Gerad - Verzahnung

- Vor Demontage des Ankers  
Kohlebürsten 5mm zurückziehen !  
Before the armature is removed the carbon brushes  
must be withdrawn by at least 5mm !

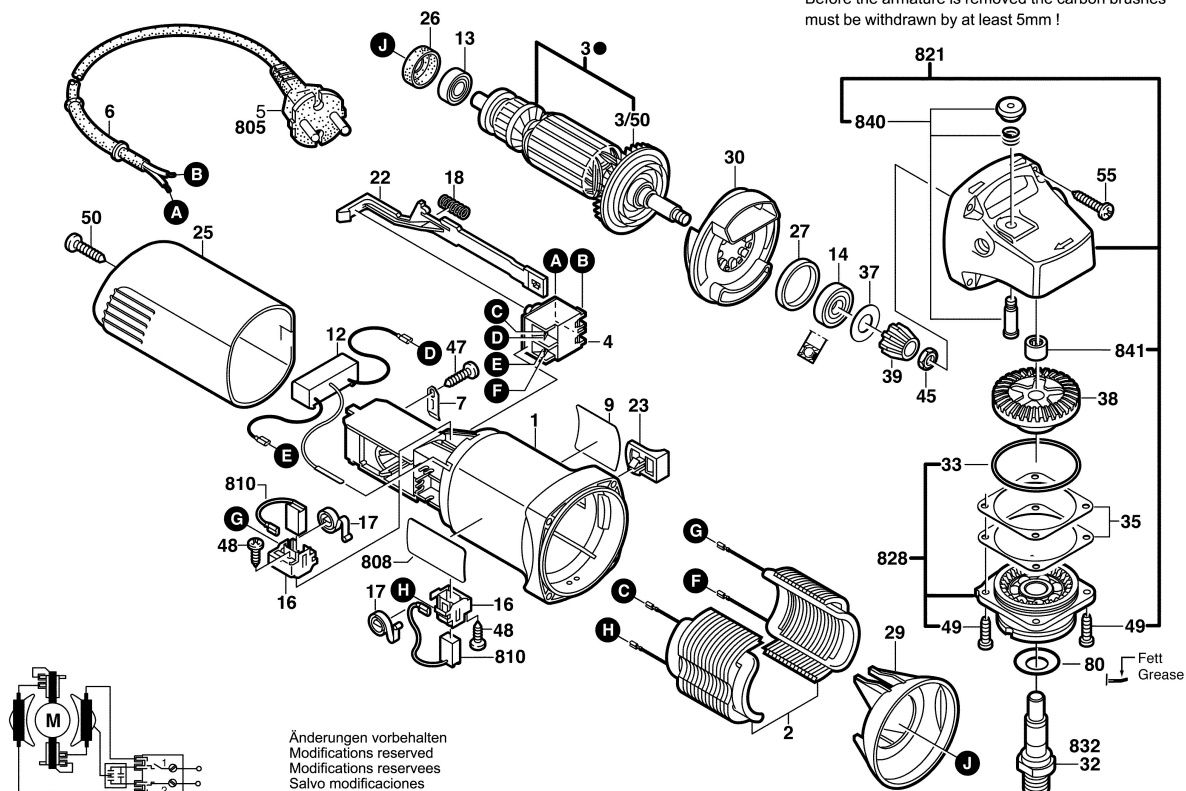

3 603 D11 040  
Stand 05-07-18  
Issue

Fig. /Abb. 2

